ASSEMBLY INSTRUCTIONS

ITEM NO: BO-3162TB

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. INSTALL LIGHTING BODY (E), GLASS (F) TO BASE (G). PULL ADDITIONAL WIRE OUT FROM THE BACK OF THE BASE (G).


2. INSERT HARP (C) INTO SADDLE OF SOCKET SECTION (D).

3. PLACE SHADE (B) ONTO HARP (C) AND SECURE IT WITH FINIAL (A).

4. INSTALL RECOMMENDED TYPE A BULB.

5. INSERT THE PLUG INTO AN OUTLET.

6. TURN ON THE LIGHT AND ENJOY!

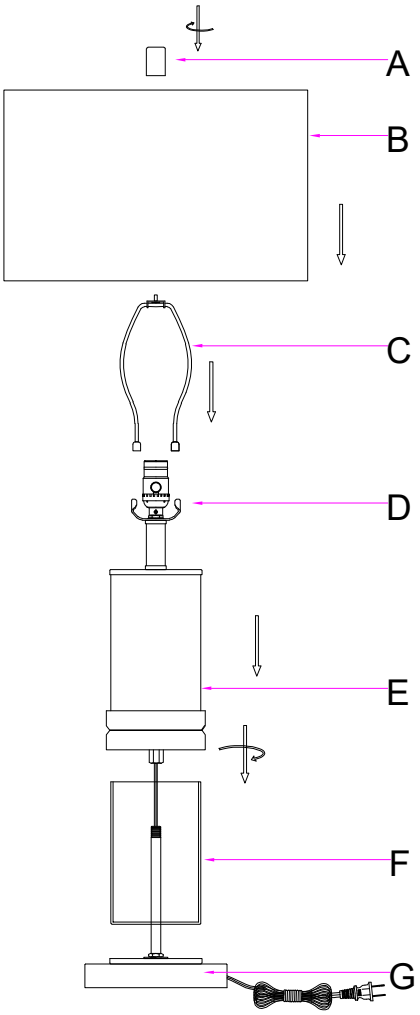

Use Max 100W type A bulb (bulbs not included) and 4W LED Bulb (bulb included)

* TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.
* THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.
* THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.