


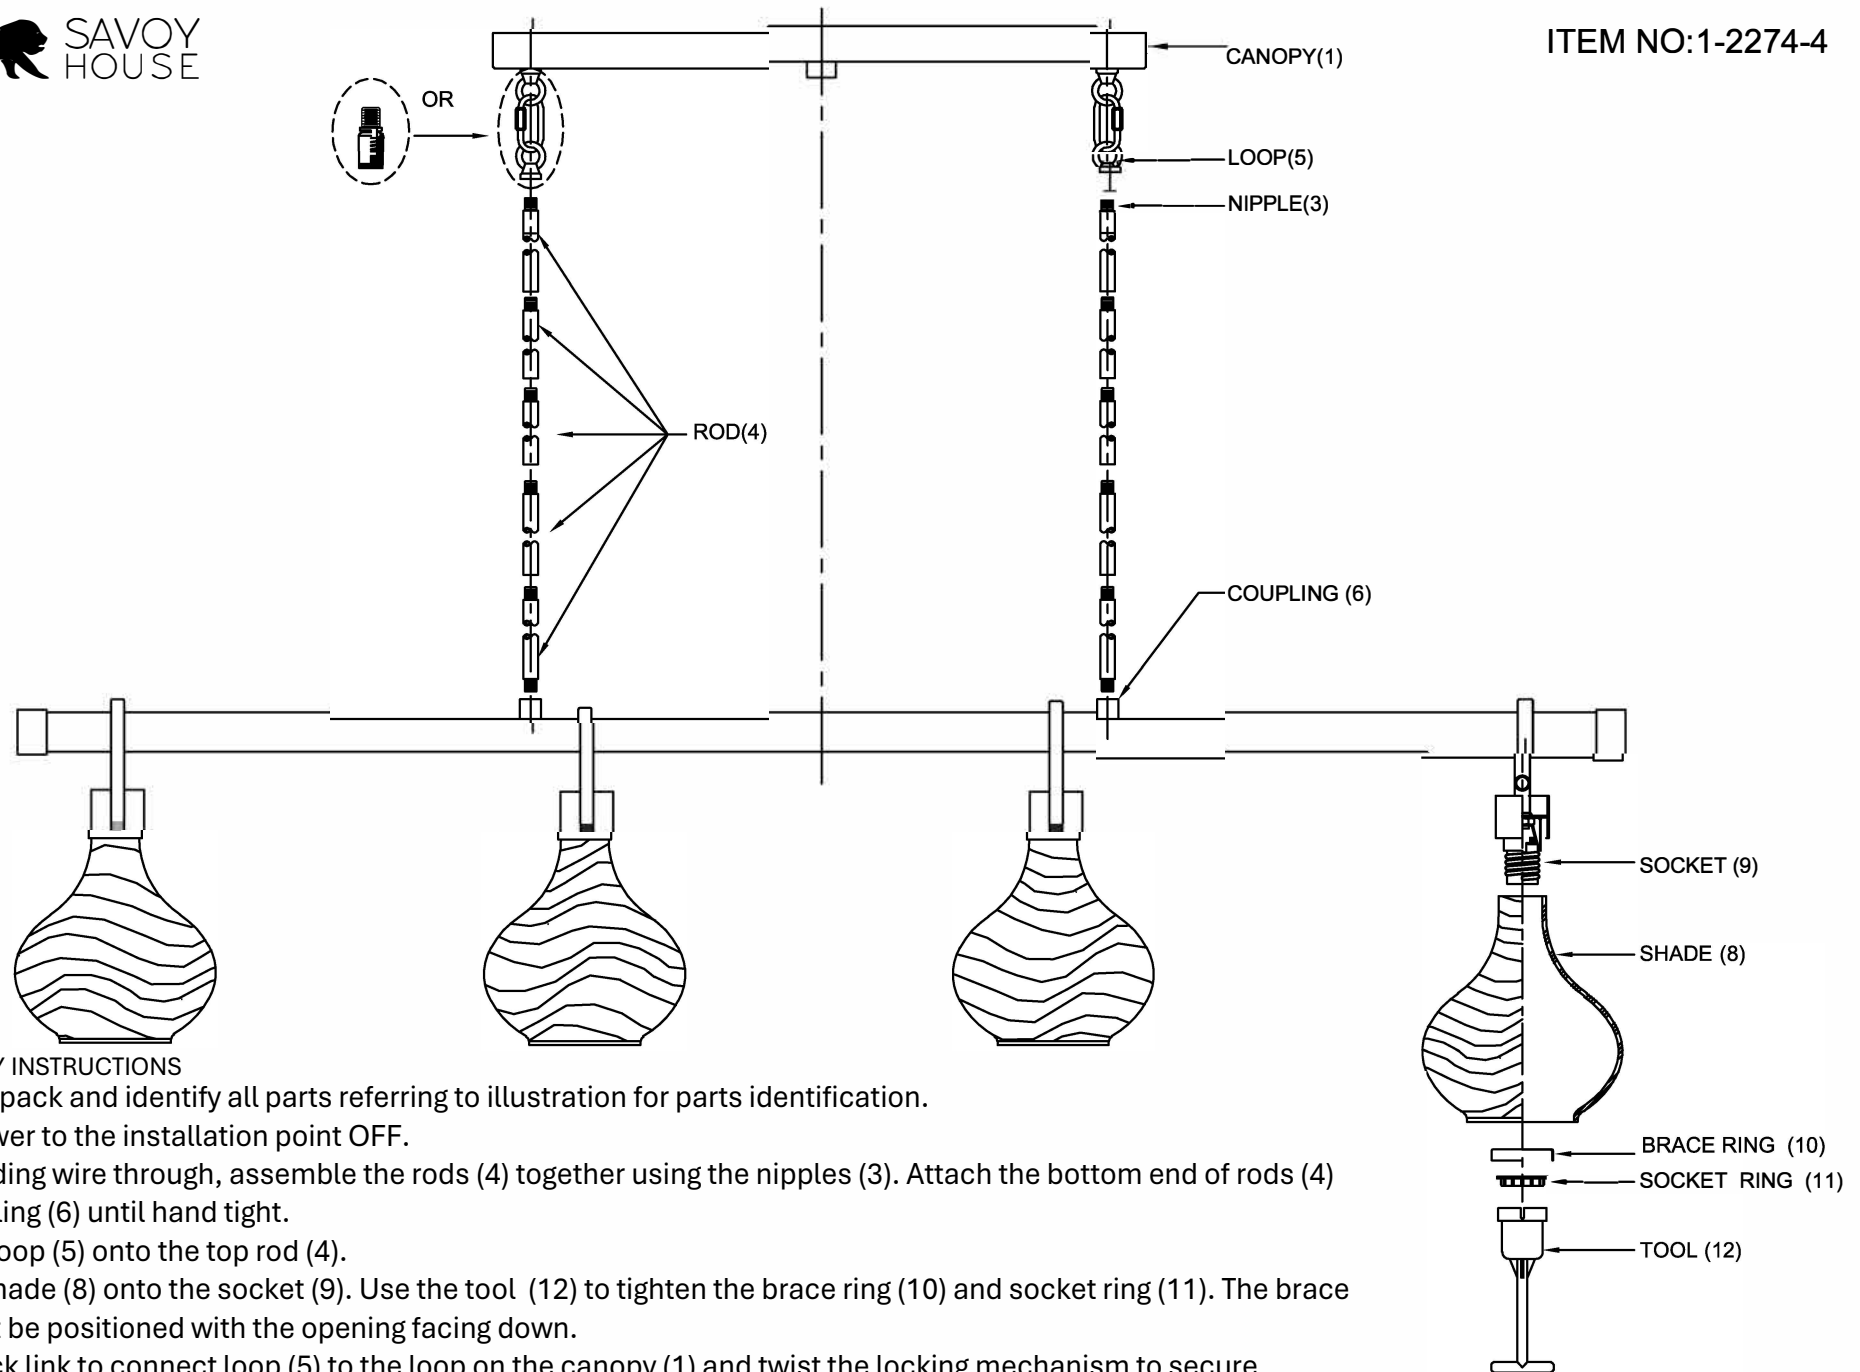

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. While threading wire through, assemble the rods (4) together using the nipples (3). Attach the bottom end of rods (4) into the coupling (6) until hand tight.
4. Secure the loop (5) onto the top rod (4).
5. Install the shade (8) onto the socket (9). Use the tool (12) to tighten the brace ring (10) and socket ring (11). The brace ring (10) must be positioned with the opening facing down.
6. Use the quick link to connect loop (5) to the loop on the canopy (1) and twist the locking mechanism to secure.
7. Refer to the additional installation instructions included with the product for wiring and installation.
8. Restore power to the installation point and retain this sheet for future reference.